



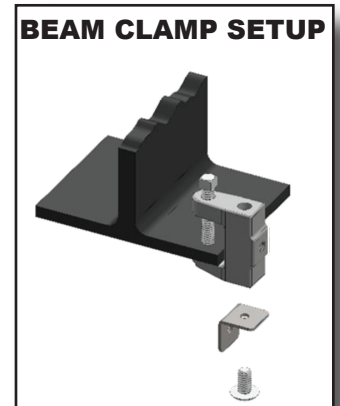

Personal Safety Partition Installation Instructions

COMPONENTS

1. (2) Mounting Angle Brackets
2. (2) Beam Clamps
3. (2) 1/4" Screws
4. (4) "S" Hooks
5. (2) Ceiling Tile Rail Hooks
6. (2) 16' Braided Hanger Line
7. (1) Clear Curtain Assembly
8. Channel Track
9. (4) End Cap

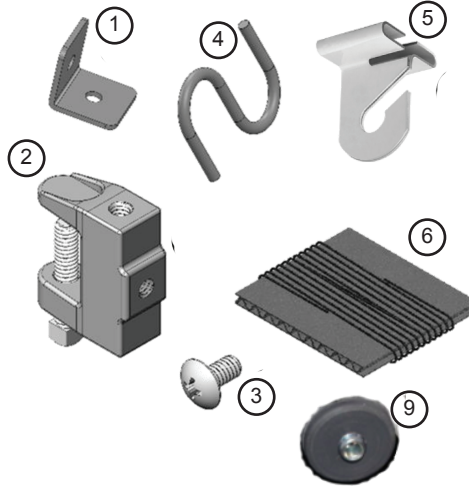

INSTALLATION

CEILING ANCHOR


1. Find the appropriate grid in the Ceiling Tile to attach the Ceiling Rail Hooks. Slide the Ceiling Rail Hooks onto the grid and crimp to secure. (**Note:** Width of Hooks does not have to be the exact same as the width of the Partition.)
2. Measure the distance from the Ceiling Tile to the height of the top of the Safety Partition.
3. Cut Clear Hanger Line to the measured length plus a few inches.
4. Make a slip knot & tighten very loosely over the Ceiling Rail Hooks.

BEAM CLAMP ANCHOR

1. Tighten the Beam Clamp against the beam flange.
2. Attach the Angle to the Beam Clamp with the Screw.
3. Measure the distance from the Beam Clamp to the height of the Top of the Safety Partition.
4. Cut Clear Hanger Line to the measured length plus a few inches.
5. Slide S-Hooks in Angle Brackets & Crimp for extra security.
6. Make a slip knot & pull tightly over the S-Hooks.

ASSEMBLING THE PARTITION

1. Take Clear Curtain Panel and Slide into Top & Bottom Channels to Form Assembly (**Note:** The top channel has holes for the S-Hooks)
2. Take Clear Curtain Assembly and Slide the S-Hooks into Top Channel.
3. Raise the Curtain Assembly Up and tie a second set of slip knots tightly over the S-Hooks.
4. Crimp S-Hooks for extra security.

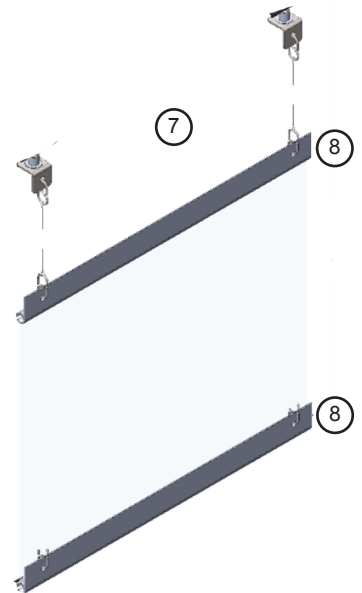

NOTE: The supplied mount hardware is intended for drop ceiling or beam style ceilings. If your ceiling is not one of these typical types, you may need to provide additional hardware. Seek the help of a professional or contact Steel Guard Support at the number below.