



TRUCK TRACK INSTALLATION

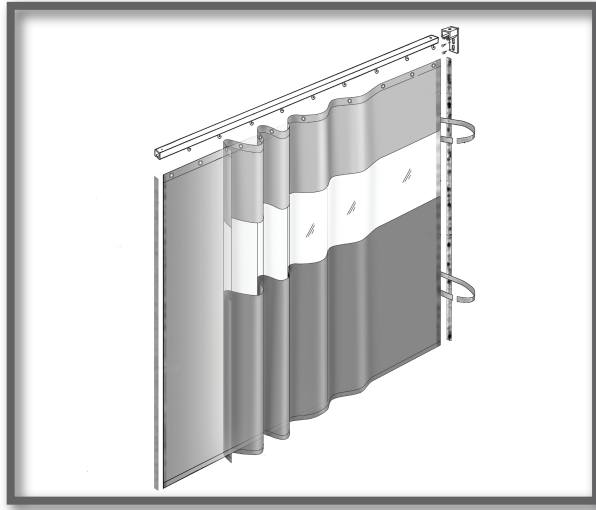

Step 1


NOTE: If you have very Long Runs You will Need to break them into Multiple Sections

1. Layout the Track Pieces and Connectors Along the Floor.
2. If there is a center splice adjoin.
3. Slide nylon rollers through track.
4. Slide wall end down mounts over both ends of track.
5. Put in-set screws & tighten both mounts.

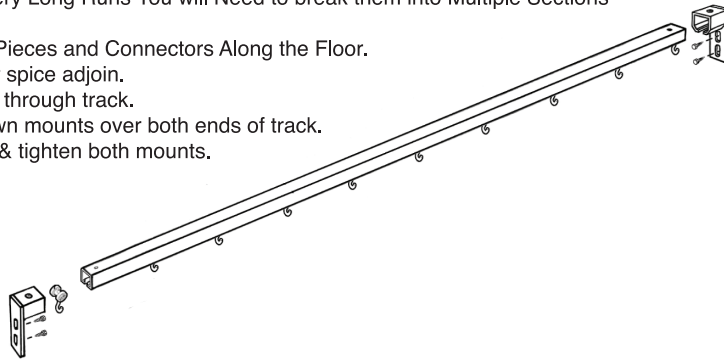


Step 2

1. Measure track length & measure trailer cab from curbside to roadside. If they measure exact then skip steps 2 & 3.
2. If cab is wider than track,
 - a. If less than 1/4" - add washers on both sides for mounting holes.
 - b. If more than 1/4" - remove one Wall mount. Look to re-drill a 1/4" hole further down to widen one side of the wall mounts.
3. If track is wider than cab
 - a. remove one wall mount shave off the difference of width from the cab width & "re-drill" a 1/4" hole further in on the track. Reattach the wall mount on one side.
4. Take track mount assembly and mount on truck.

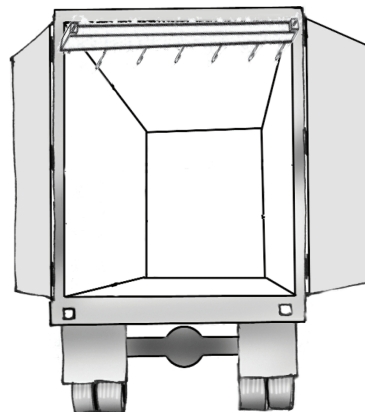

Step 3

1. Adhere hook Velcro strip to side(s) of truck where curtain will meet.
2. Use tek screws every 12"-18" to seal to truck.
3. Drill tie back straps (2) in positions equidistant from each other about 1'-2' from top & bottom.

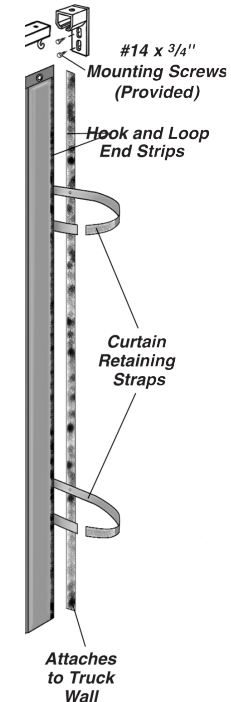

Step 4

NOTE: Make sure Curtains are at Room Temperature to Unfold and Unwrinkle Easily

1. Take each Curtain and Place the Curtain Grommet over Each Roller Hook. Make sure the Tag is facing on the inside, and if there is a Logo, faces on the Inside.

